



How to Use the Edgemate Hand Trimmer

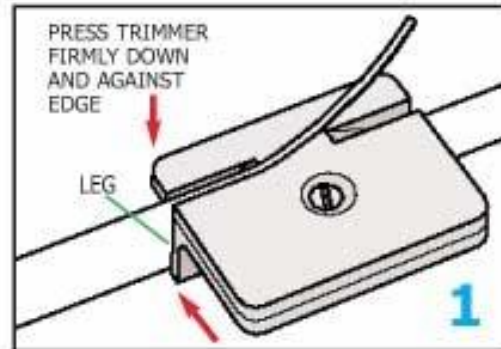

1. Edging to be trimmed must be cool and firmly adhered.
2. Place the Edgemate Hand Trimmer on end of edge to be trimmed.
3. Apply steady pressure while smoothly sliding the trimmer the length of the edge.
(as shown in #1)
4. The trimmed excess will peel up and out of the trimmer slot.

Changing Blades

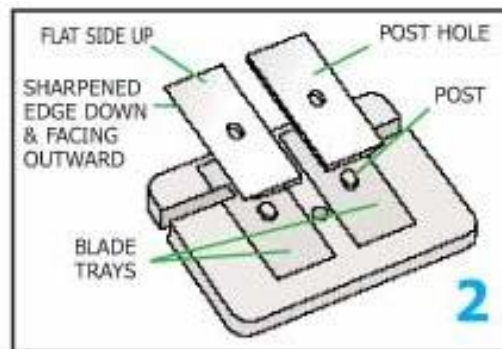

NOTE - the two cutter blades are interchangeable for longer life.

1. Use only single bevel mat cutter blades: .015 x .75 x 1.75"
2. Remove screw and open unit to swap or replace blades, as shown in #2. Be sure to place blades over posts with flat sides up. (Sharpened edge must face outward)